





## The Magnificent Module

### Flat Wall Setup Instructions

\*Use the Standard Mag Mod Set Up Instructions to Build the correct number of "V" Stacks Before Using this Instruction Book


#### Step 1:

Assemble the necessary amount of Steel Jacks Using extensions equal to the same height as the "V" Stacks. Extensions lock down using Set Screws

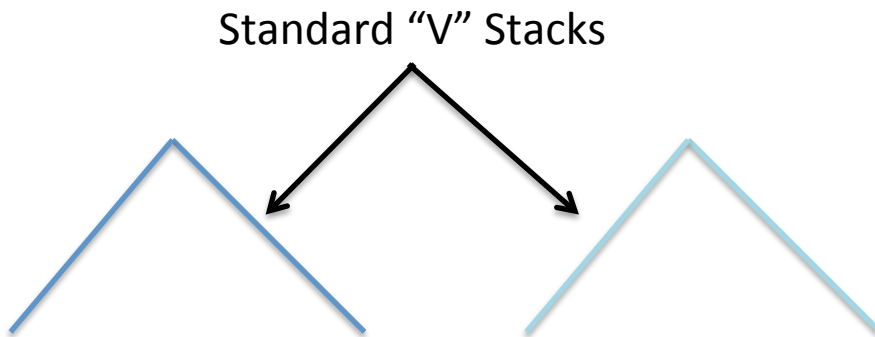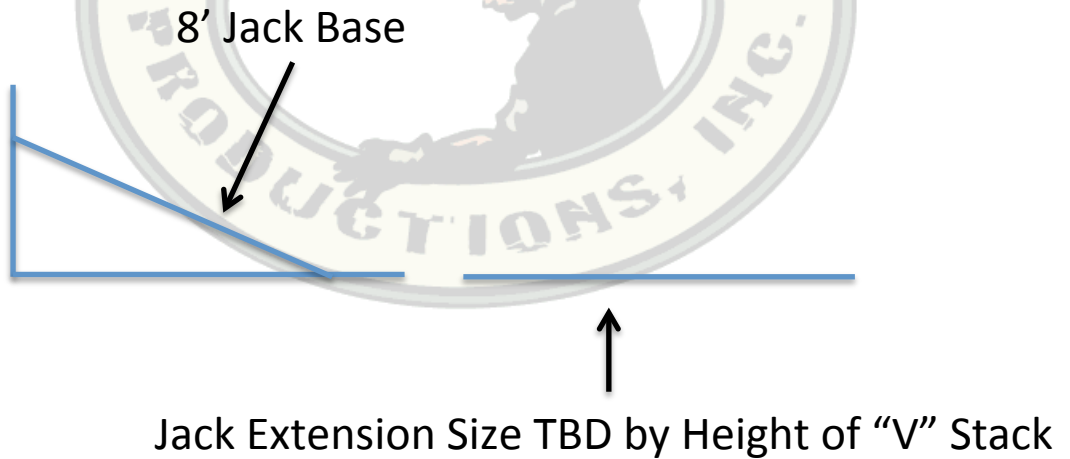


## Step 2:

Attach A jack to the Stage Left Edge of the Stage left Stack. Use a Velcro Cinch at the middle of each Panel all the way to to top Panel (Images 1 & 2)

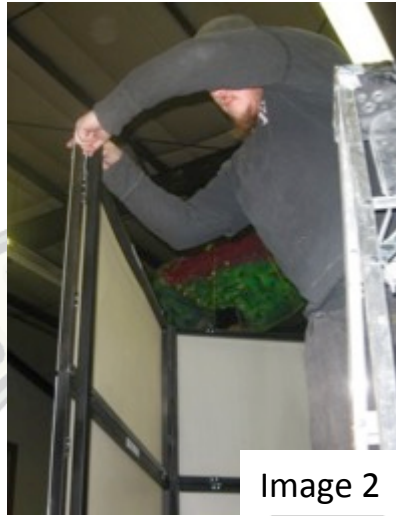

## Step 3:

Place a 50lbs Sandbag on the Back Edge of the Jack Base, Remove the Safety Rope from the stack and Open to a Flat Wall (Image 3)

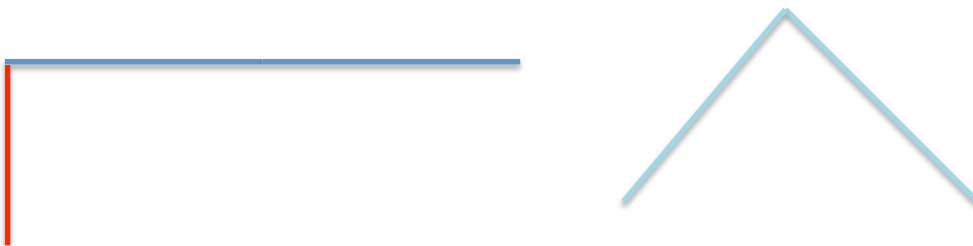

#### Step 4:

Maneuver the Next “V” Stack into place lined up with the first stack so that the Stage Left Panels are in the Flat plane with the First Stack. Keep the Stage Right Panels hinged to Ensure Everything remains Upright. Insert Cotter Pin R-Clips Along the Vertical Seam Between the Stacks (Image 4)



Image 4

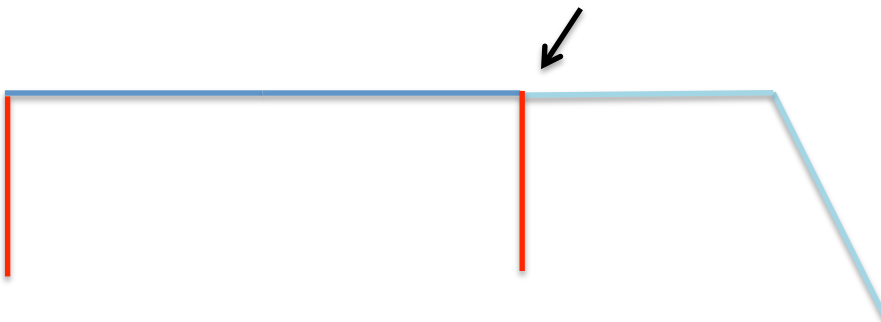


Image 5

#### Step 5:

Install a Jack at the seam between each stack Using Velcro Cinches at the middle of each panel all the way to to the top panel. Wrap both Panels and the Jack in the Velcro Connecting Everything Together (Image 5)

Insert Pins Before Attaching jack



\*Place a 50lbs Sandbag on the Back Edge of Each Additional Jack


## Step 6:

Repeat the process until you reach the Desired Width of The Set.  
Put A Jack on the Furthest Stage Right Edge to Complete the Wall  
(Image 6)



## Step 7:

After Set is Assembled Double Check that the Set looks like the  
Design then Dust all Panels for Best Lighting Results (Image 7)

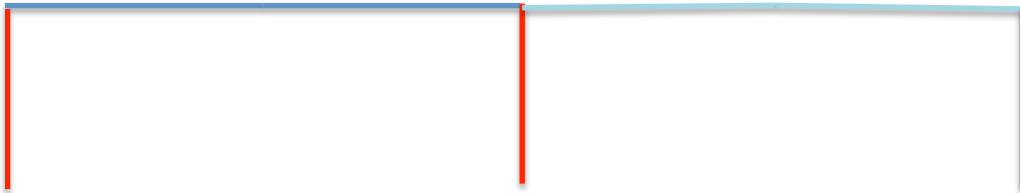

\*Place a 50lbs Sandbag on the Back Edge of Each Additional Jack

**\*Follow the installation steps backwards in order to strike safely and avoid any damage to any of the supplied hardware**

**\*If there are any issues or Questions with your Install please call our Office Line 303-744-6465**