Planks Drapeline/Truss Hanging



Setup Instructions

Step 1:

If you are hanging The Planks on drape, install the drape first. If using pipe-and-drape, raise the drape to height before adding The Planks. Then, hook a U Bolt over the Drapeline

crossbar or truss and lock it down with a ball end on the Upstage Side of the pipe (Images 1

& 2)



Step 2:

Slide 2 Ends of Trim Chain Over the U Bolt creating a loop. Lock Down with The Ball End on the DS Side of the Pipe (Images 3 & 4)






Step 3:

Install 2 U-bolts for each column of Planks, about 3 feet apart. It doesn't need to be exact; avoid obstacles where needed. (Image 5)




Step 4:
Slide The PVC Pipes through the chain loops, to create an under hanging Batten from the Original Pipe (Image 6)

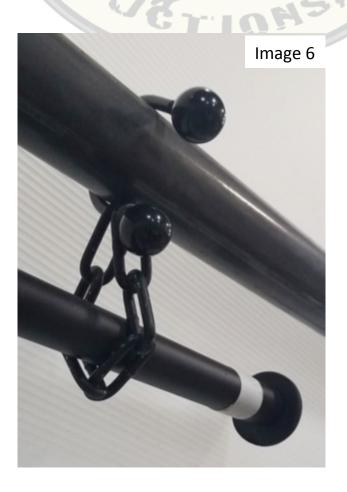

Step 5:

Take the Pre-Strung Planks and Hang each Strap Over the White Mark on the PVC Batten.

Connect the Carabineer To the Velcro Loop Attached on the Velcro Hanging Straps (Image 7) If you need to adjust the height you can peel a Plank off the top and re-add It to the bottom, then adjust the Velcro loop to fine-tune the hanging height.

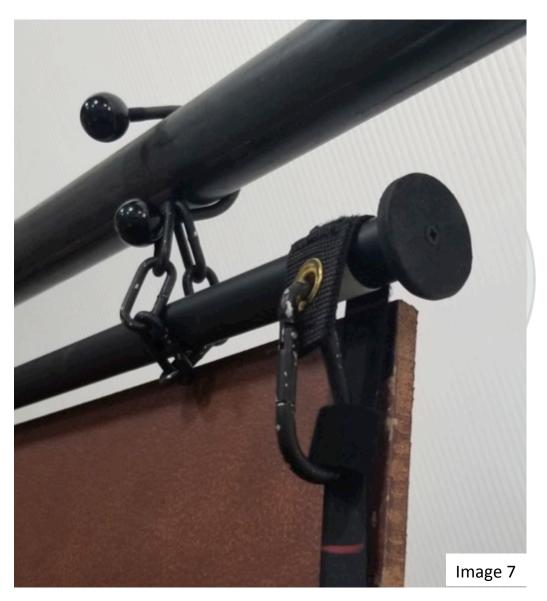

Step 6:

After all Plank Stacks are attached to Top Battens Fly out the Truss while dressing the Bottom of each stack to prevent Planks falling off the Velcro

(If Installing a Drapeline system it is recommended that the Drape be at the desired height before adding Scenic Elements)

Step 7:

After everything is raised to the desired height use the Angle Iron Bottom Battens and attach the Velcro Hanging Straps. Roll up the remaining Hanging Strap and bundle behind Angle Iron (Image 8)



*You can move the bottom batten to align all Planks

*Follow the installation steps backwards in order to strike safely and avoid any damage to any of the supplied hardware. Please Re Stack Planks & Roll Straps so they Fit Neatly Back in the Box for Return Shipment

*If there are any issues or Questions with your Install please call our Office Line 303-744-6465