


# THE MESH ON PIPE- AND-DRAPE UPRIGHTS SETUP INSTRUCTIONS

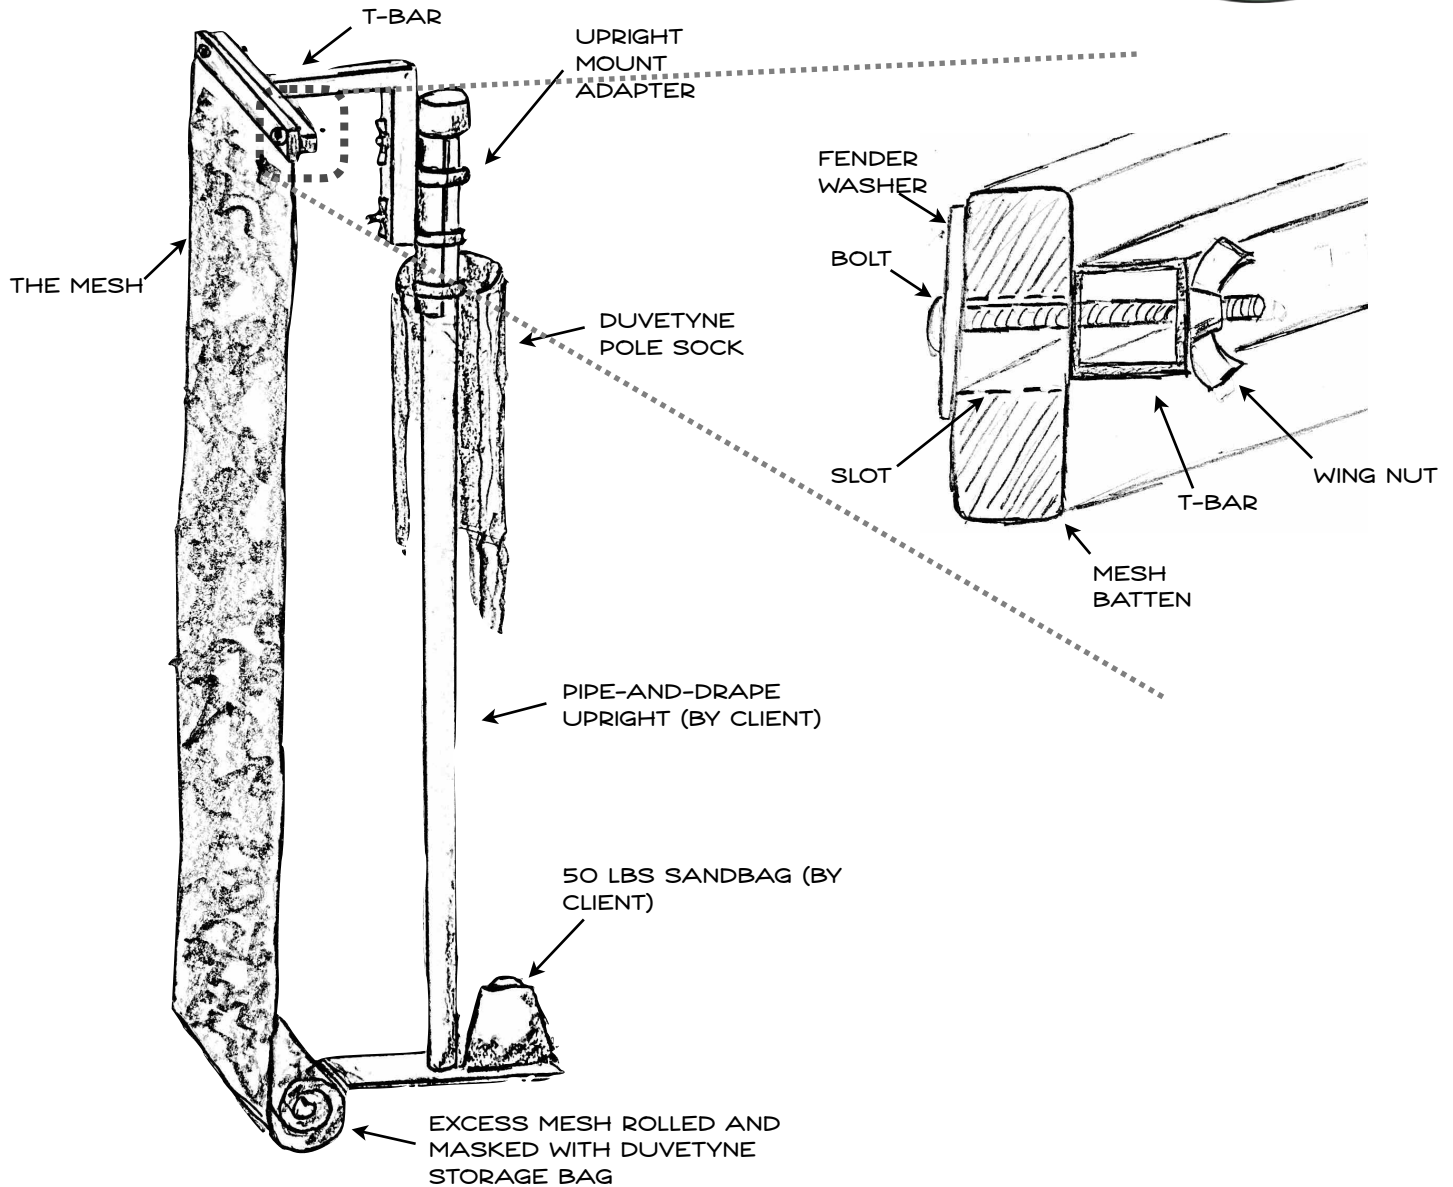

## STEPS

- Add 50 lbs sandbag to P&D base
- Cinch Upright Mount Adapter onto pipe-and-drape upright with velcro cinches
- Attach T-Bar with wing nuts
  - Check level before tightening
- Wrap black Pole Sock around Adapter; let slack dangle (dress after extending)
- Attach The Mesh batten (wood) via (2) bolts through slots into holes in T-Bar
- Extend upright to final height
- Roll excess Mesh at bottom and mask with the duvetyne storage bag it shipped in
- Light from multiple angles for best effect